

FIG. 1

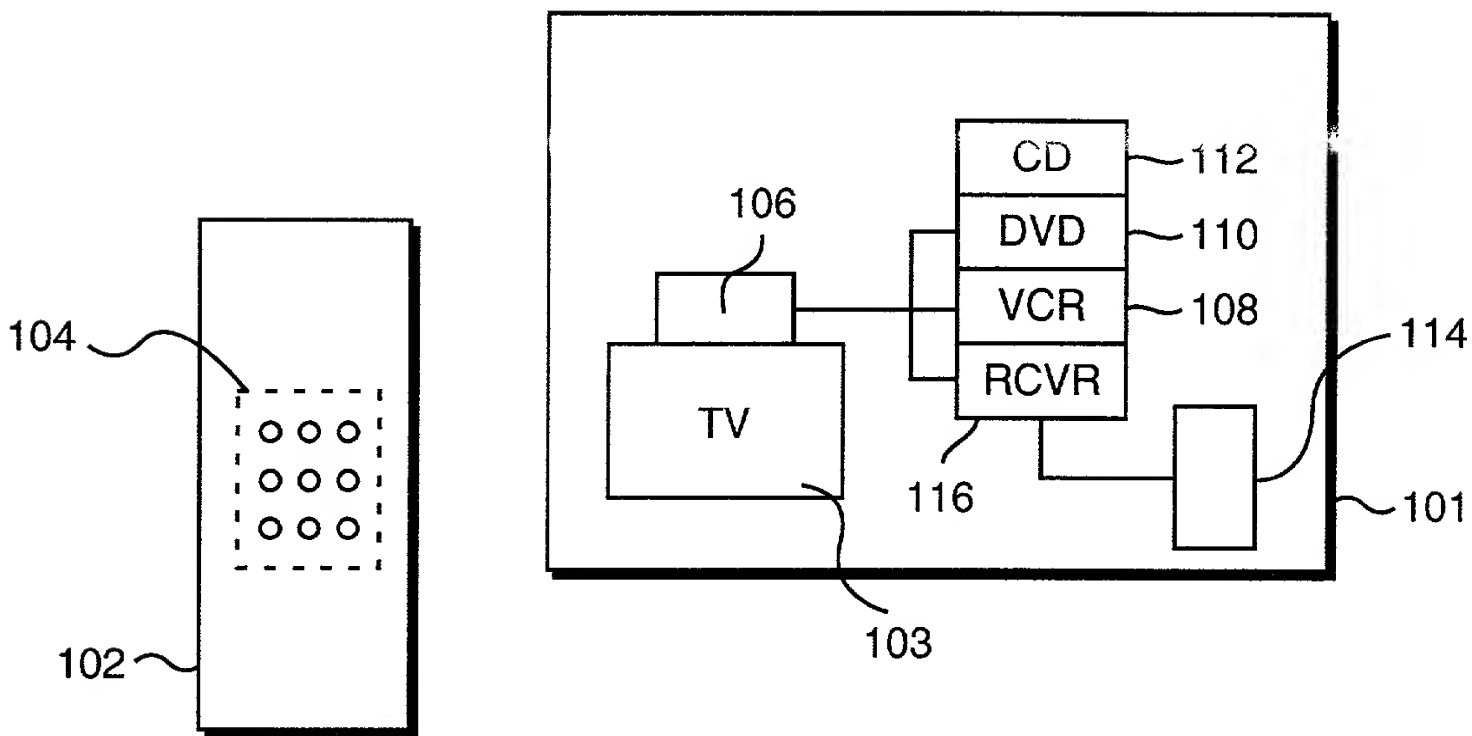


FIG. 2

CHANNEL CHANGING CLASS

CHANNEL UP
CHANNEL DOWN
NUMBER BUTTONS (0-9)
PREVIOUS CHANNEL
TV/VCR

206

VOLUME CHANGING CLASS

VOLUME UP
VOLUME DOWN
MUTE

204

POWER CLASS

POWER
OFF
ON

202

TRANSPORT CLASS

PLAY
STOP
REWIND
FAST FORWARD
NEXT CHANNEL (TRACK, CHAPTER, PRESET)
PREVIOUS CHANNEL (TRACK, CHAPTER, PRESET)
RECORD
PAUSE
NEXT

208

CONTROL CLASS

SURROUND
DISPLAY
MENU
GUIDE
UP
DOWN
LEFT
RIGHT
RESET (EXIT, CANCEL)

210

FIG. 3

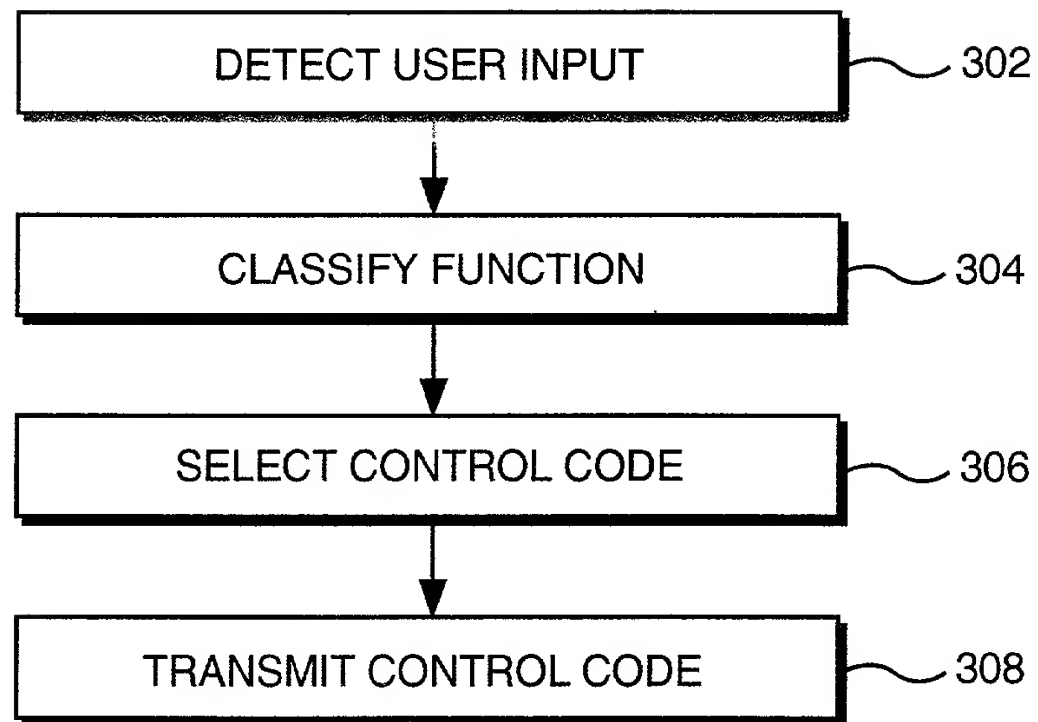


FIG. 4

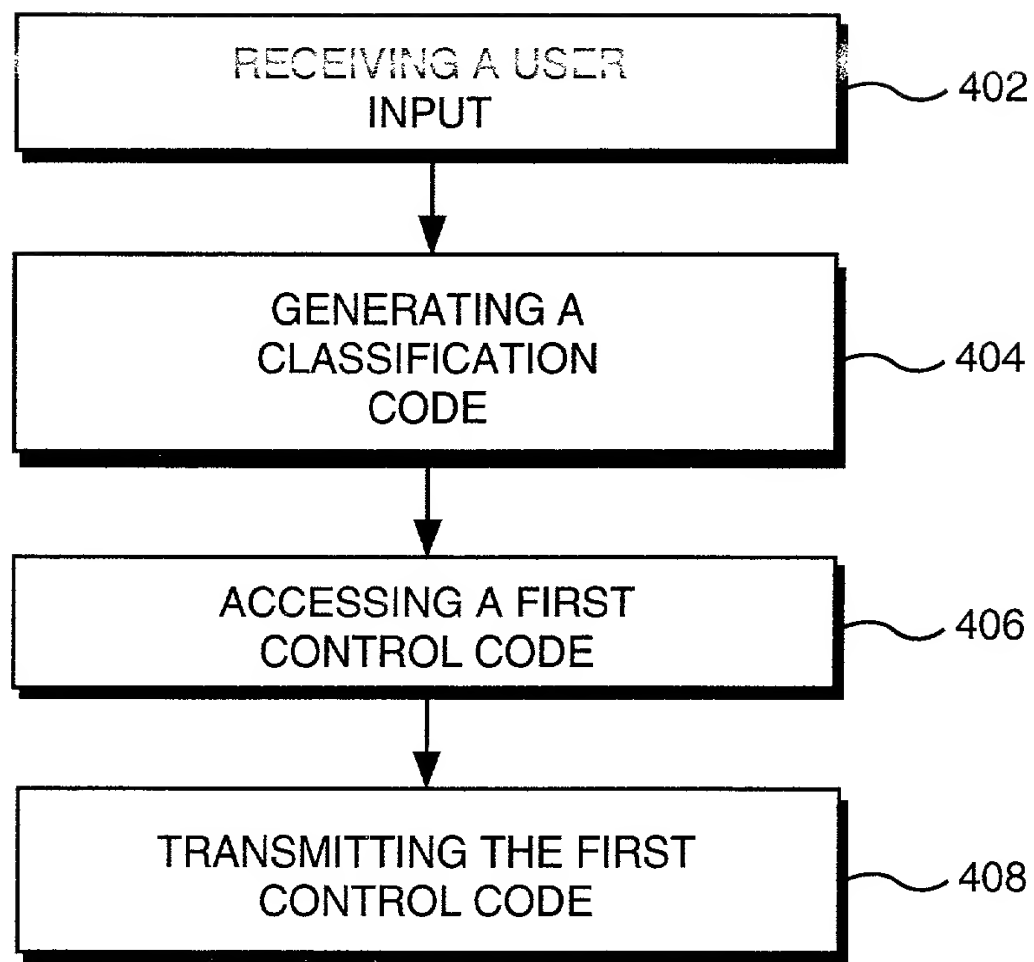


FIG. 5

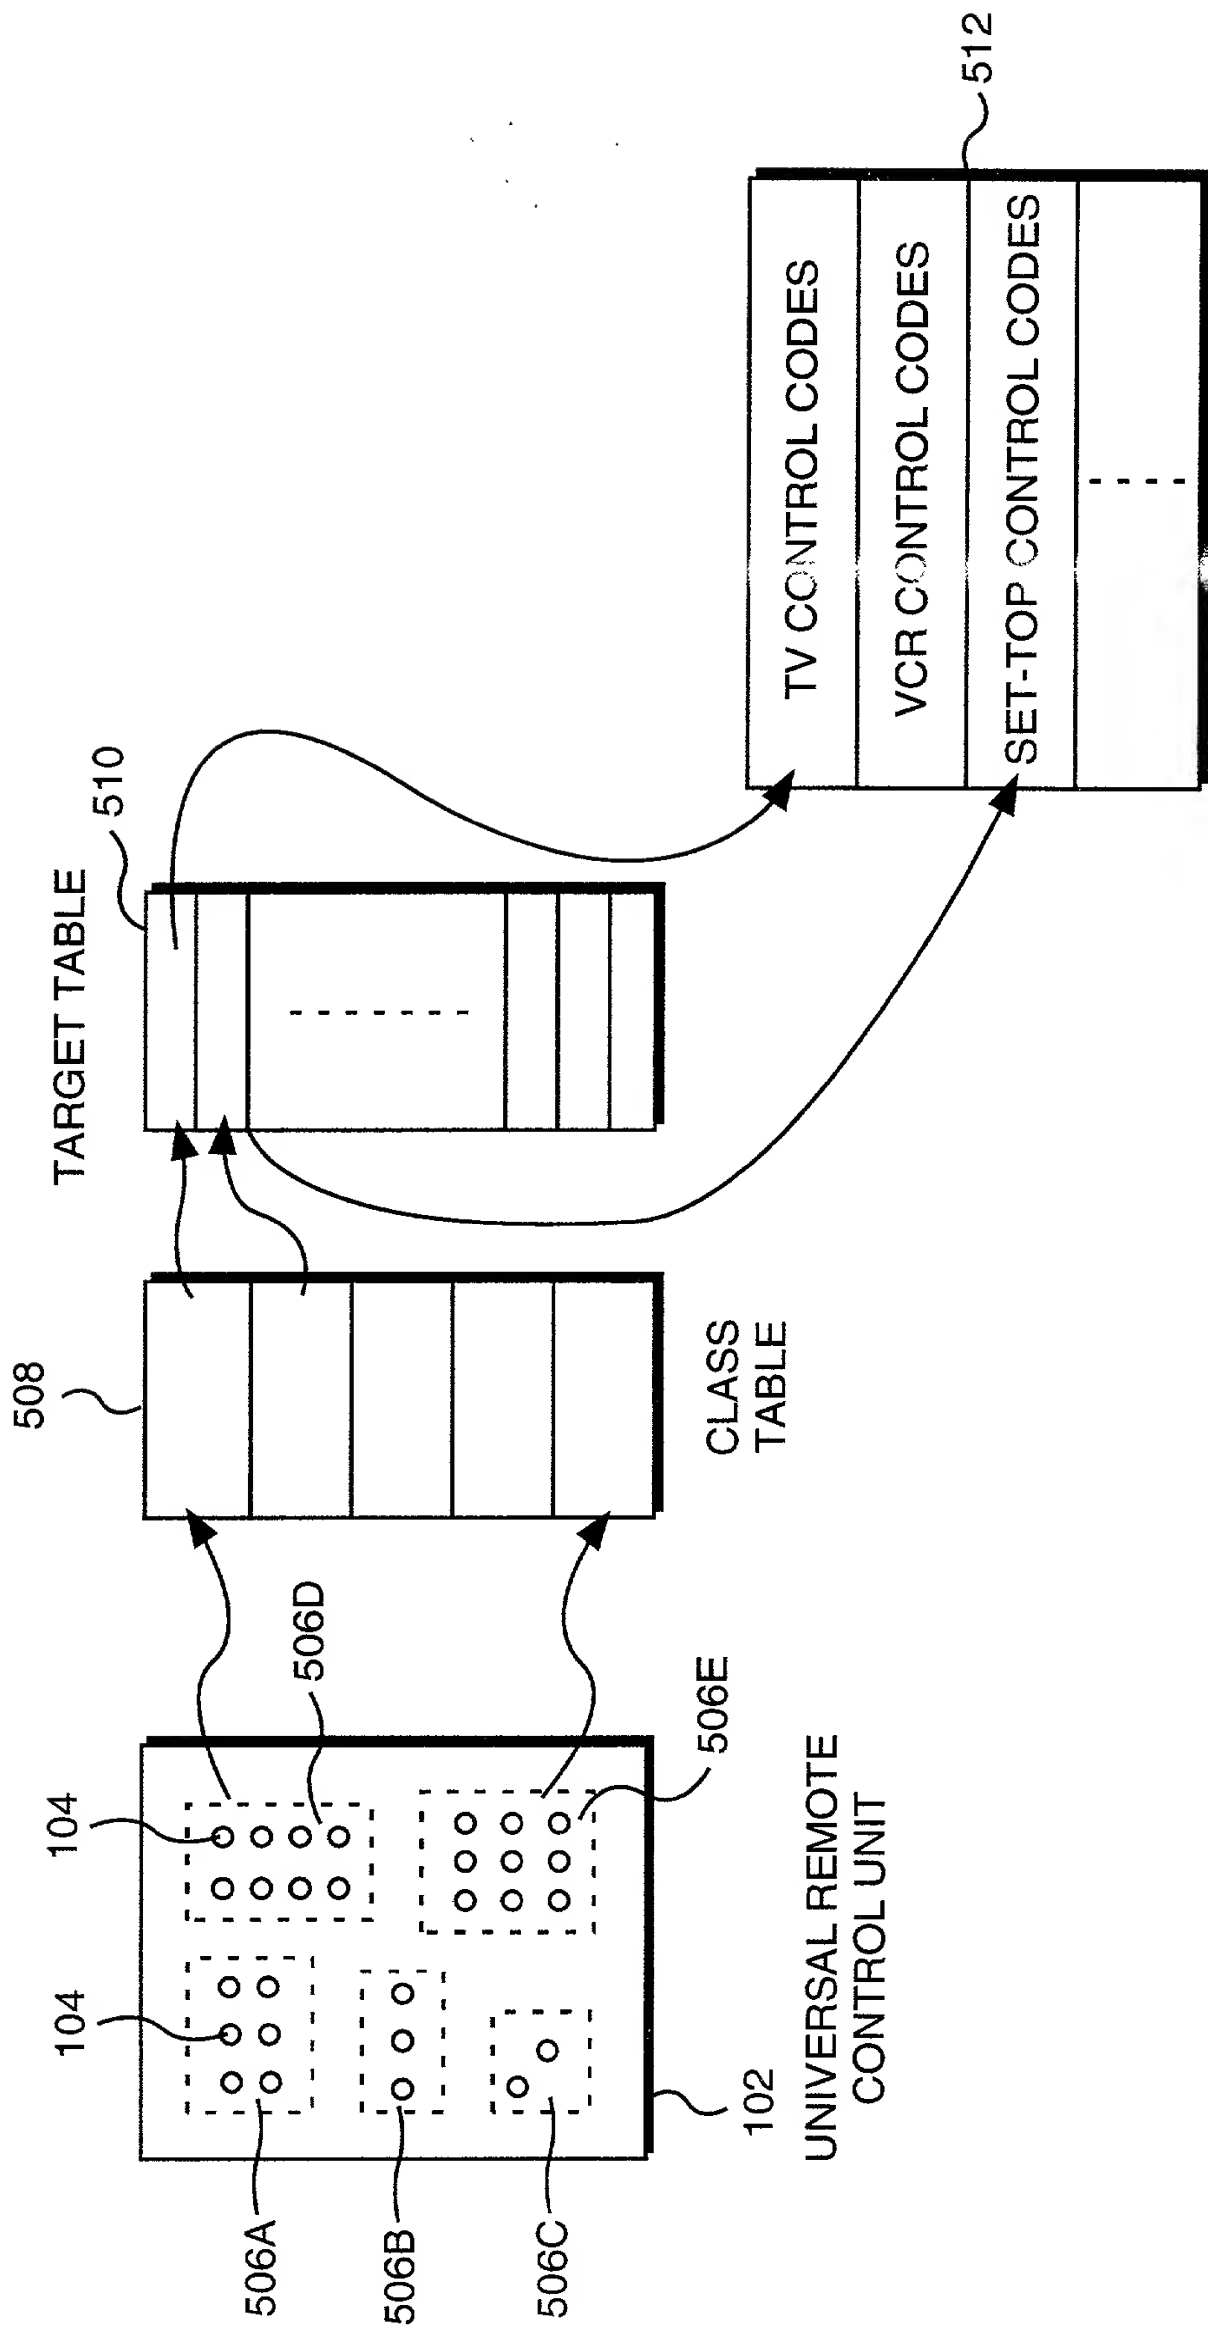


FIG. 6AA

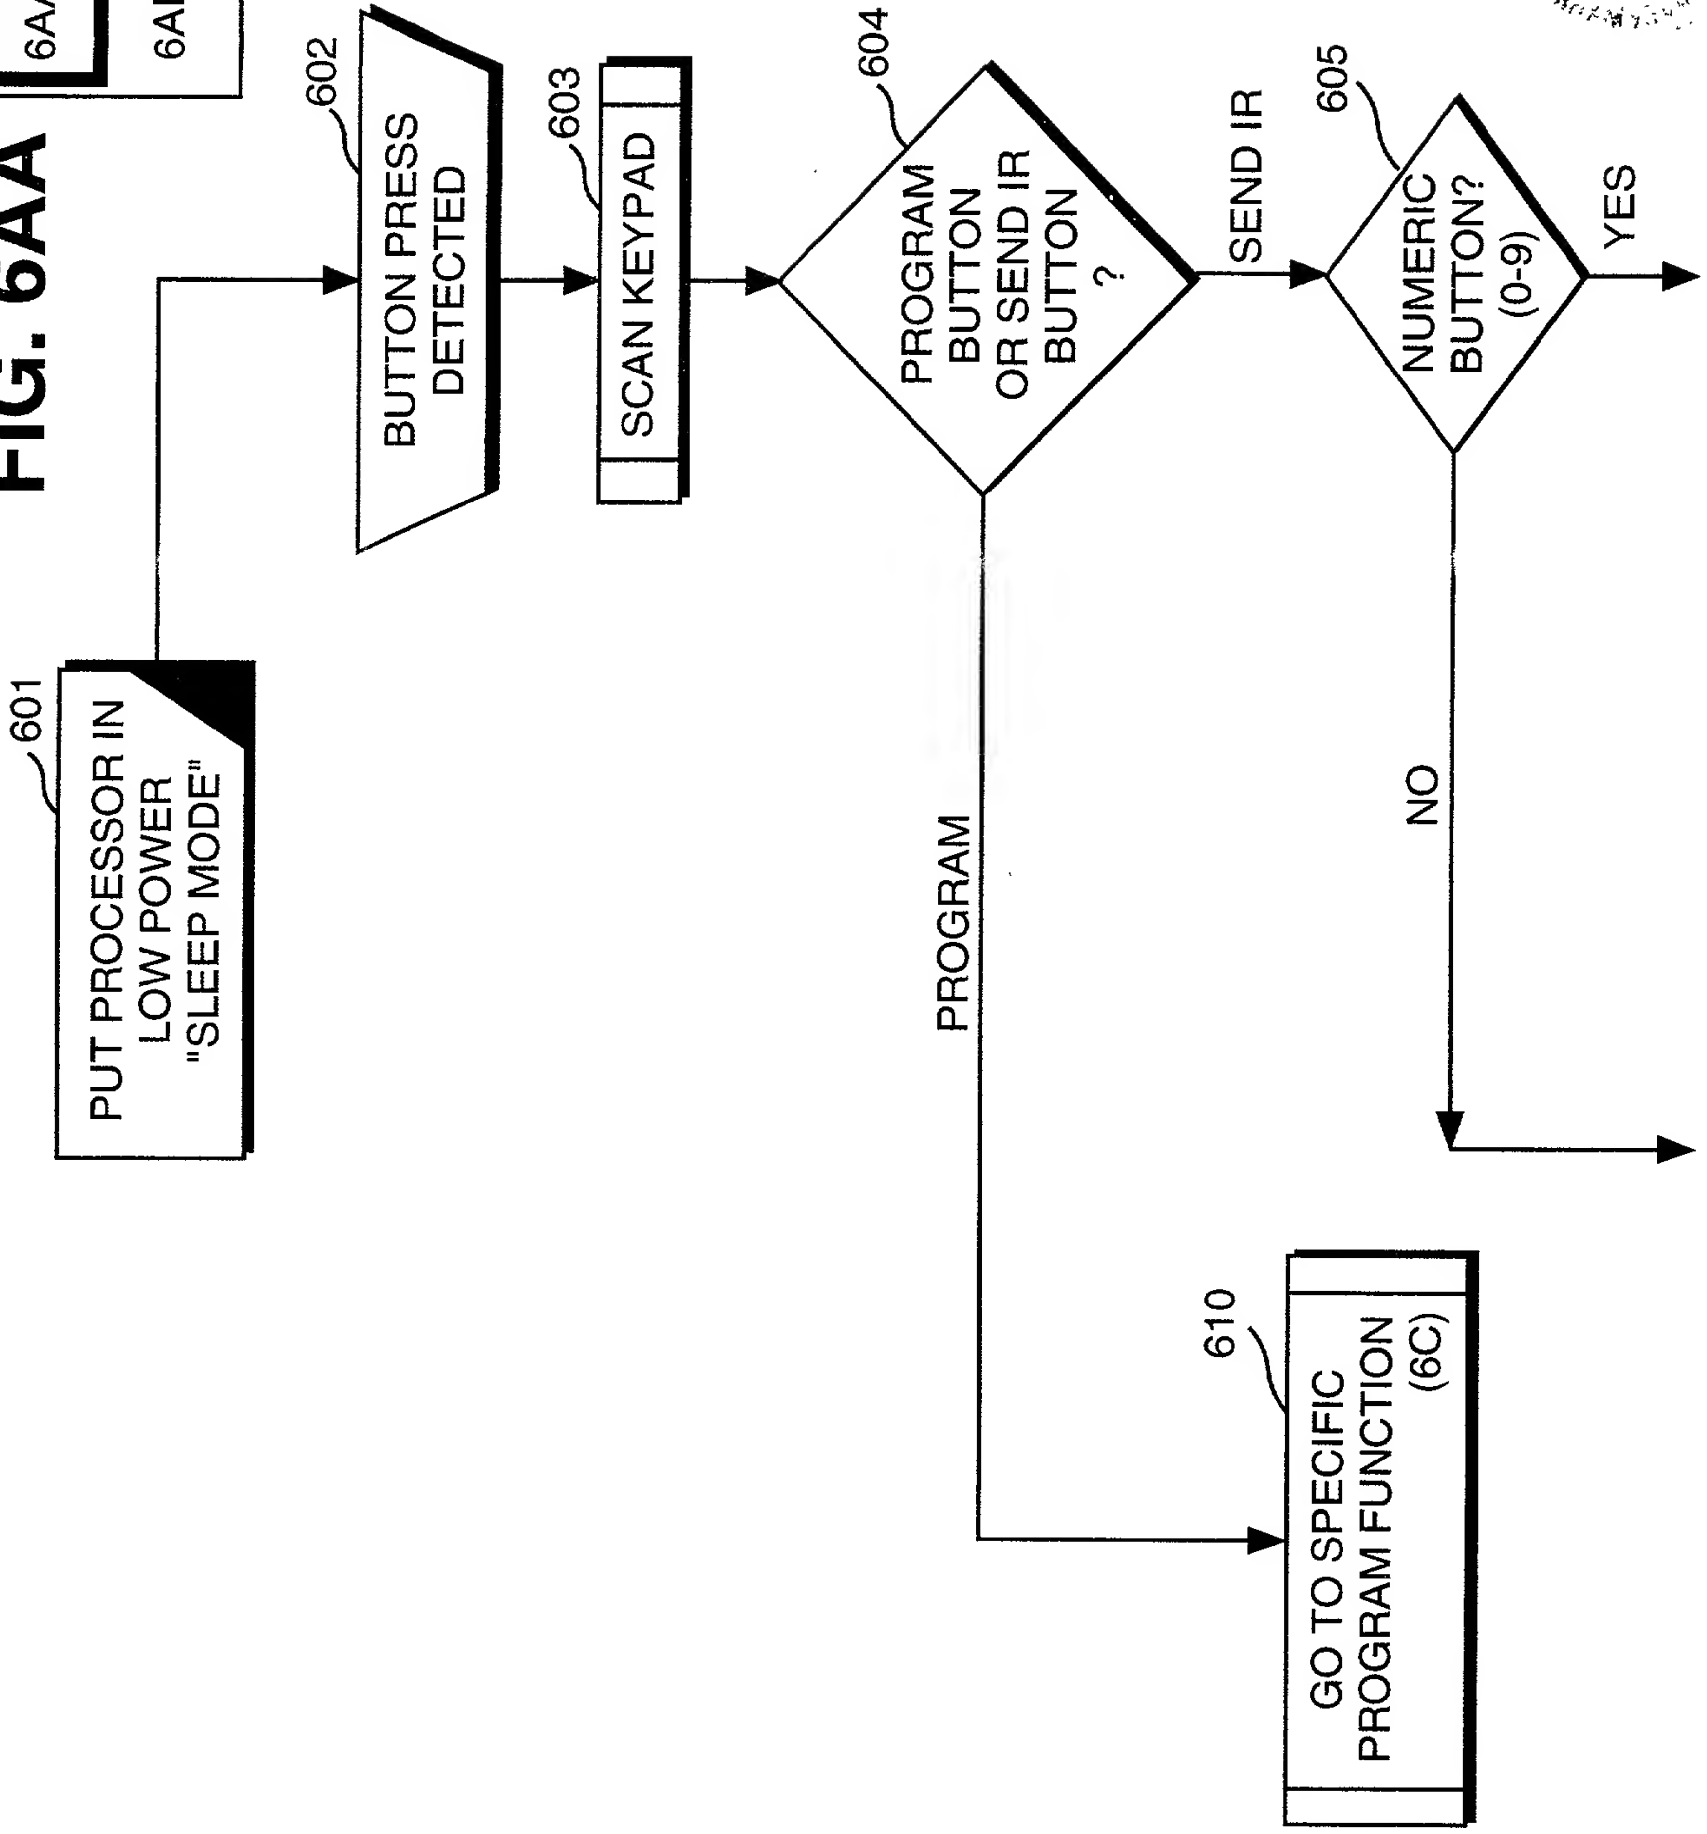
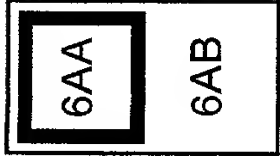


FIG. 6AB

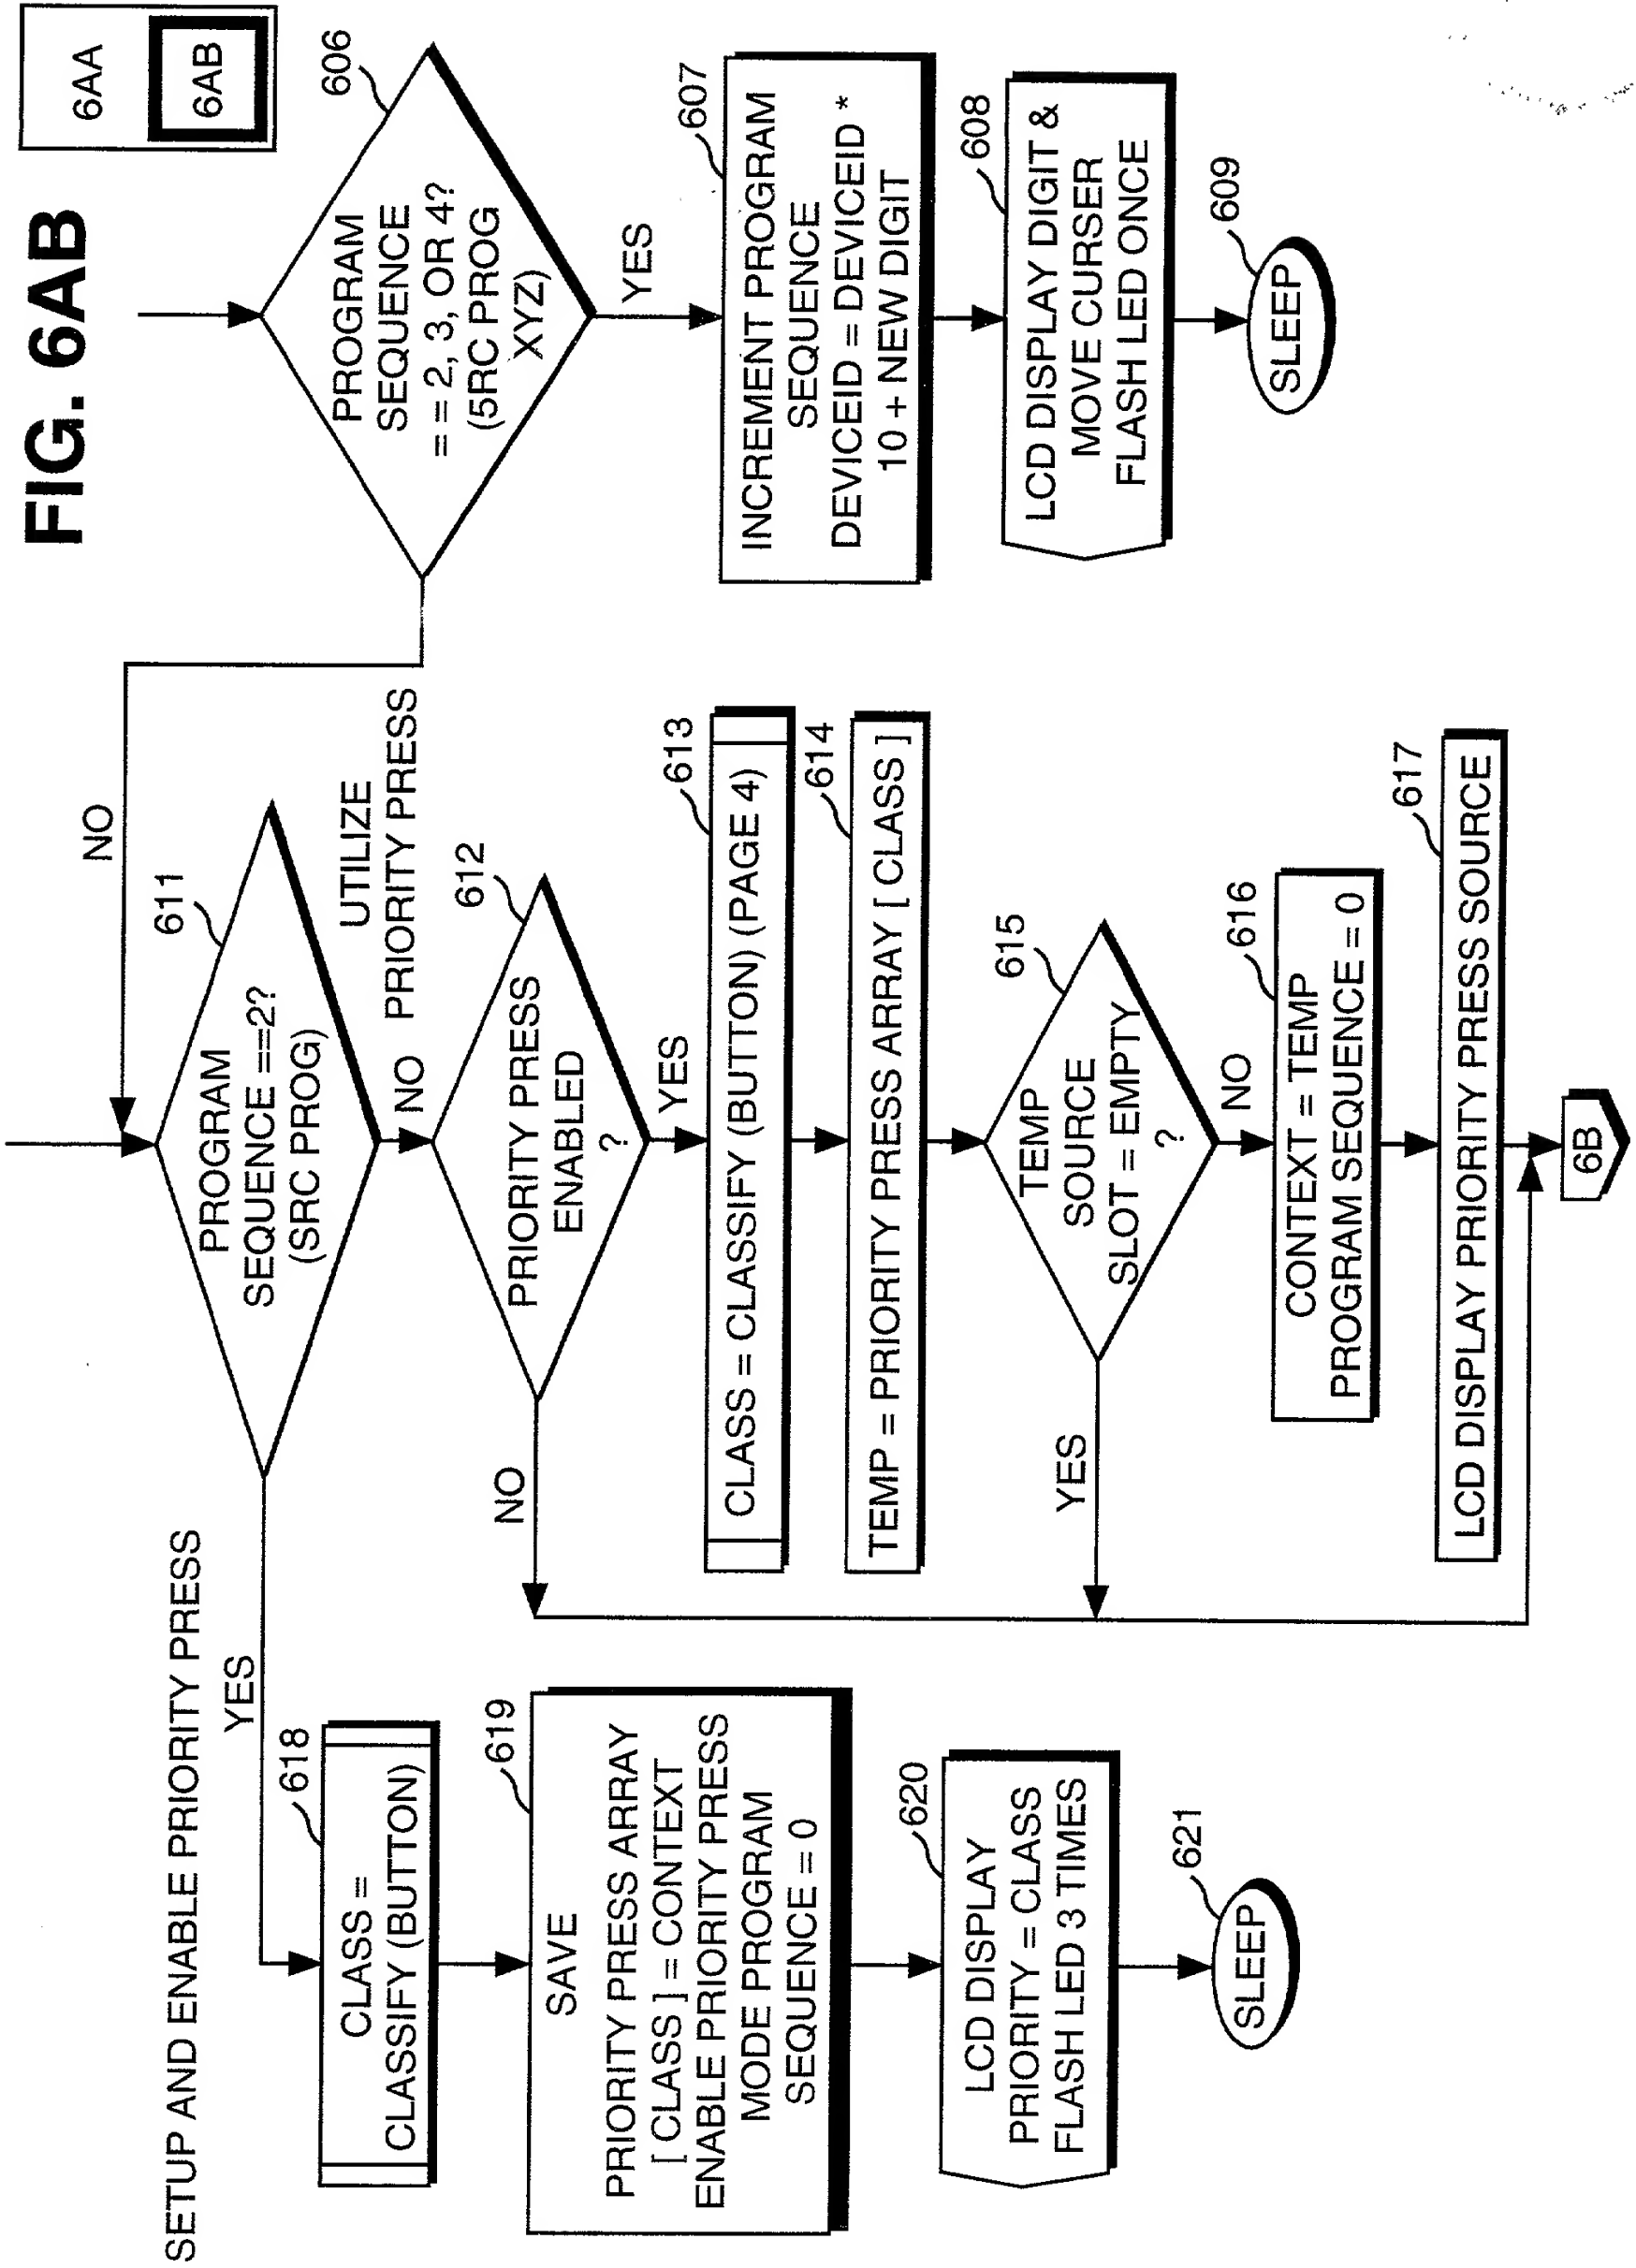


FIG. 6B


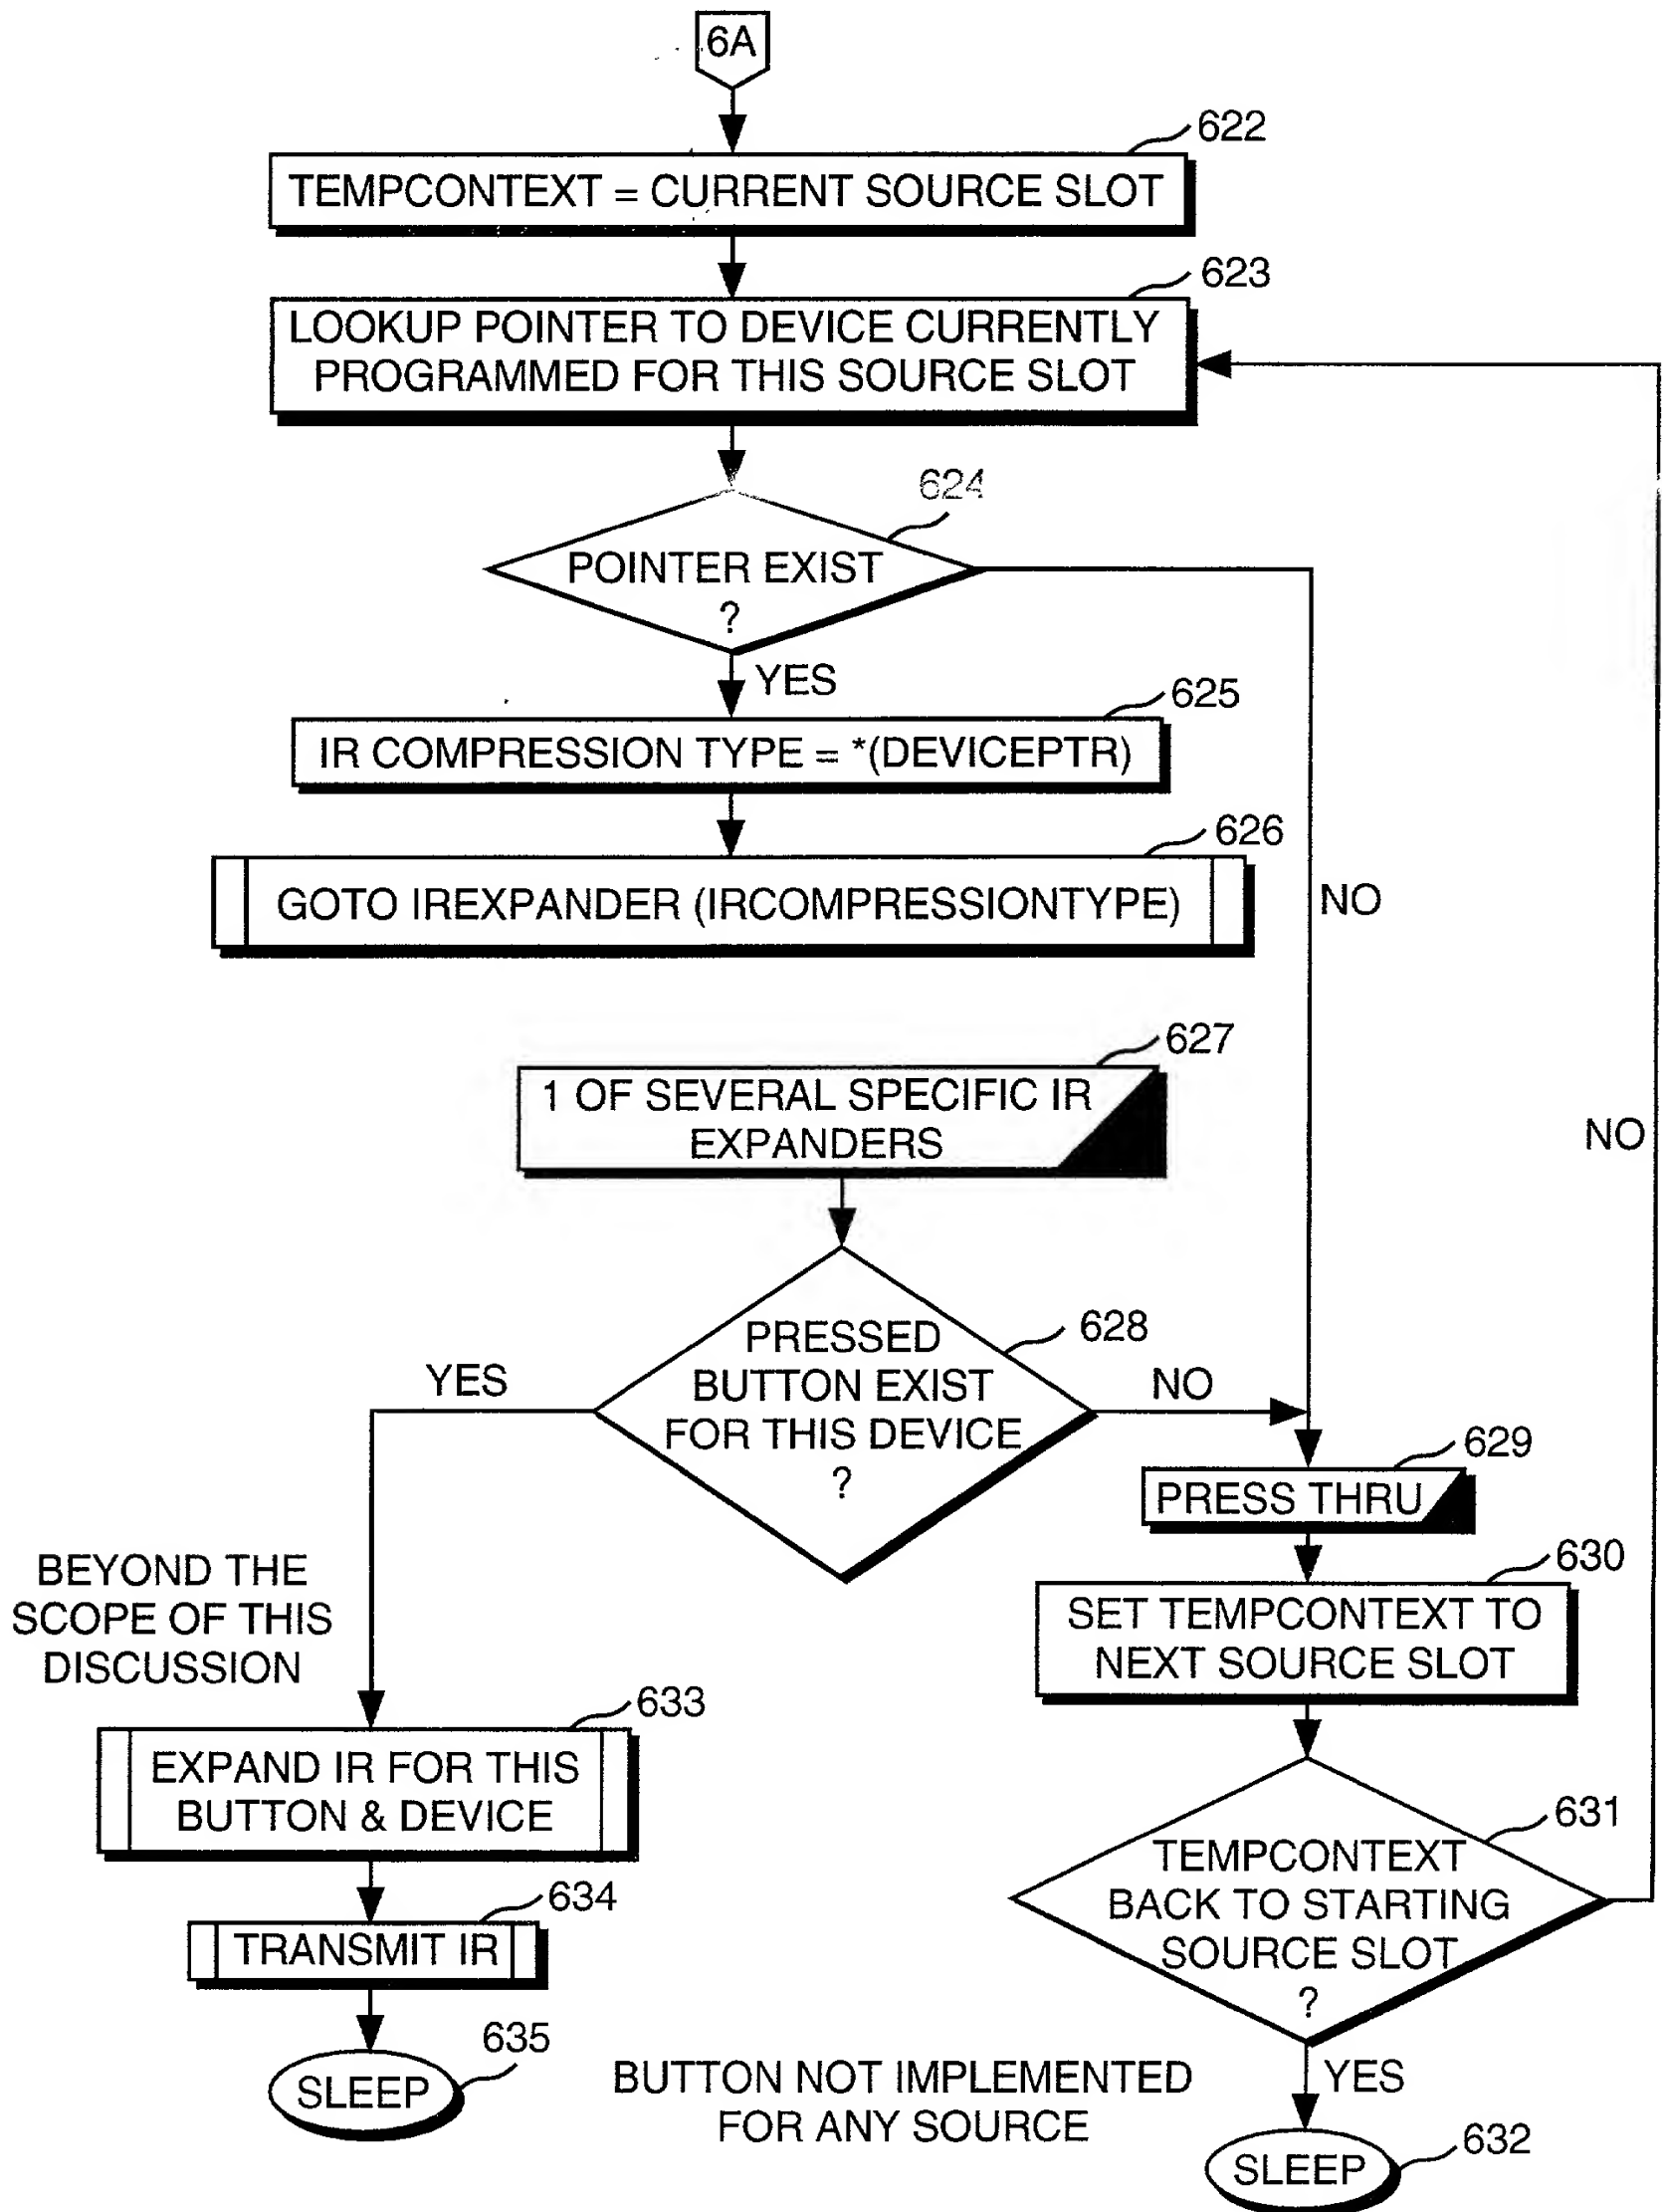


FIG. 6C

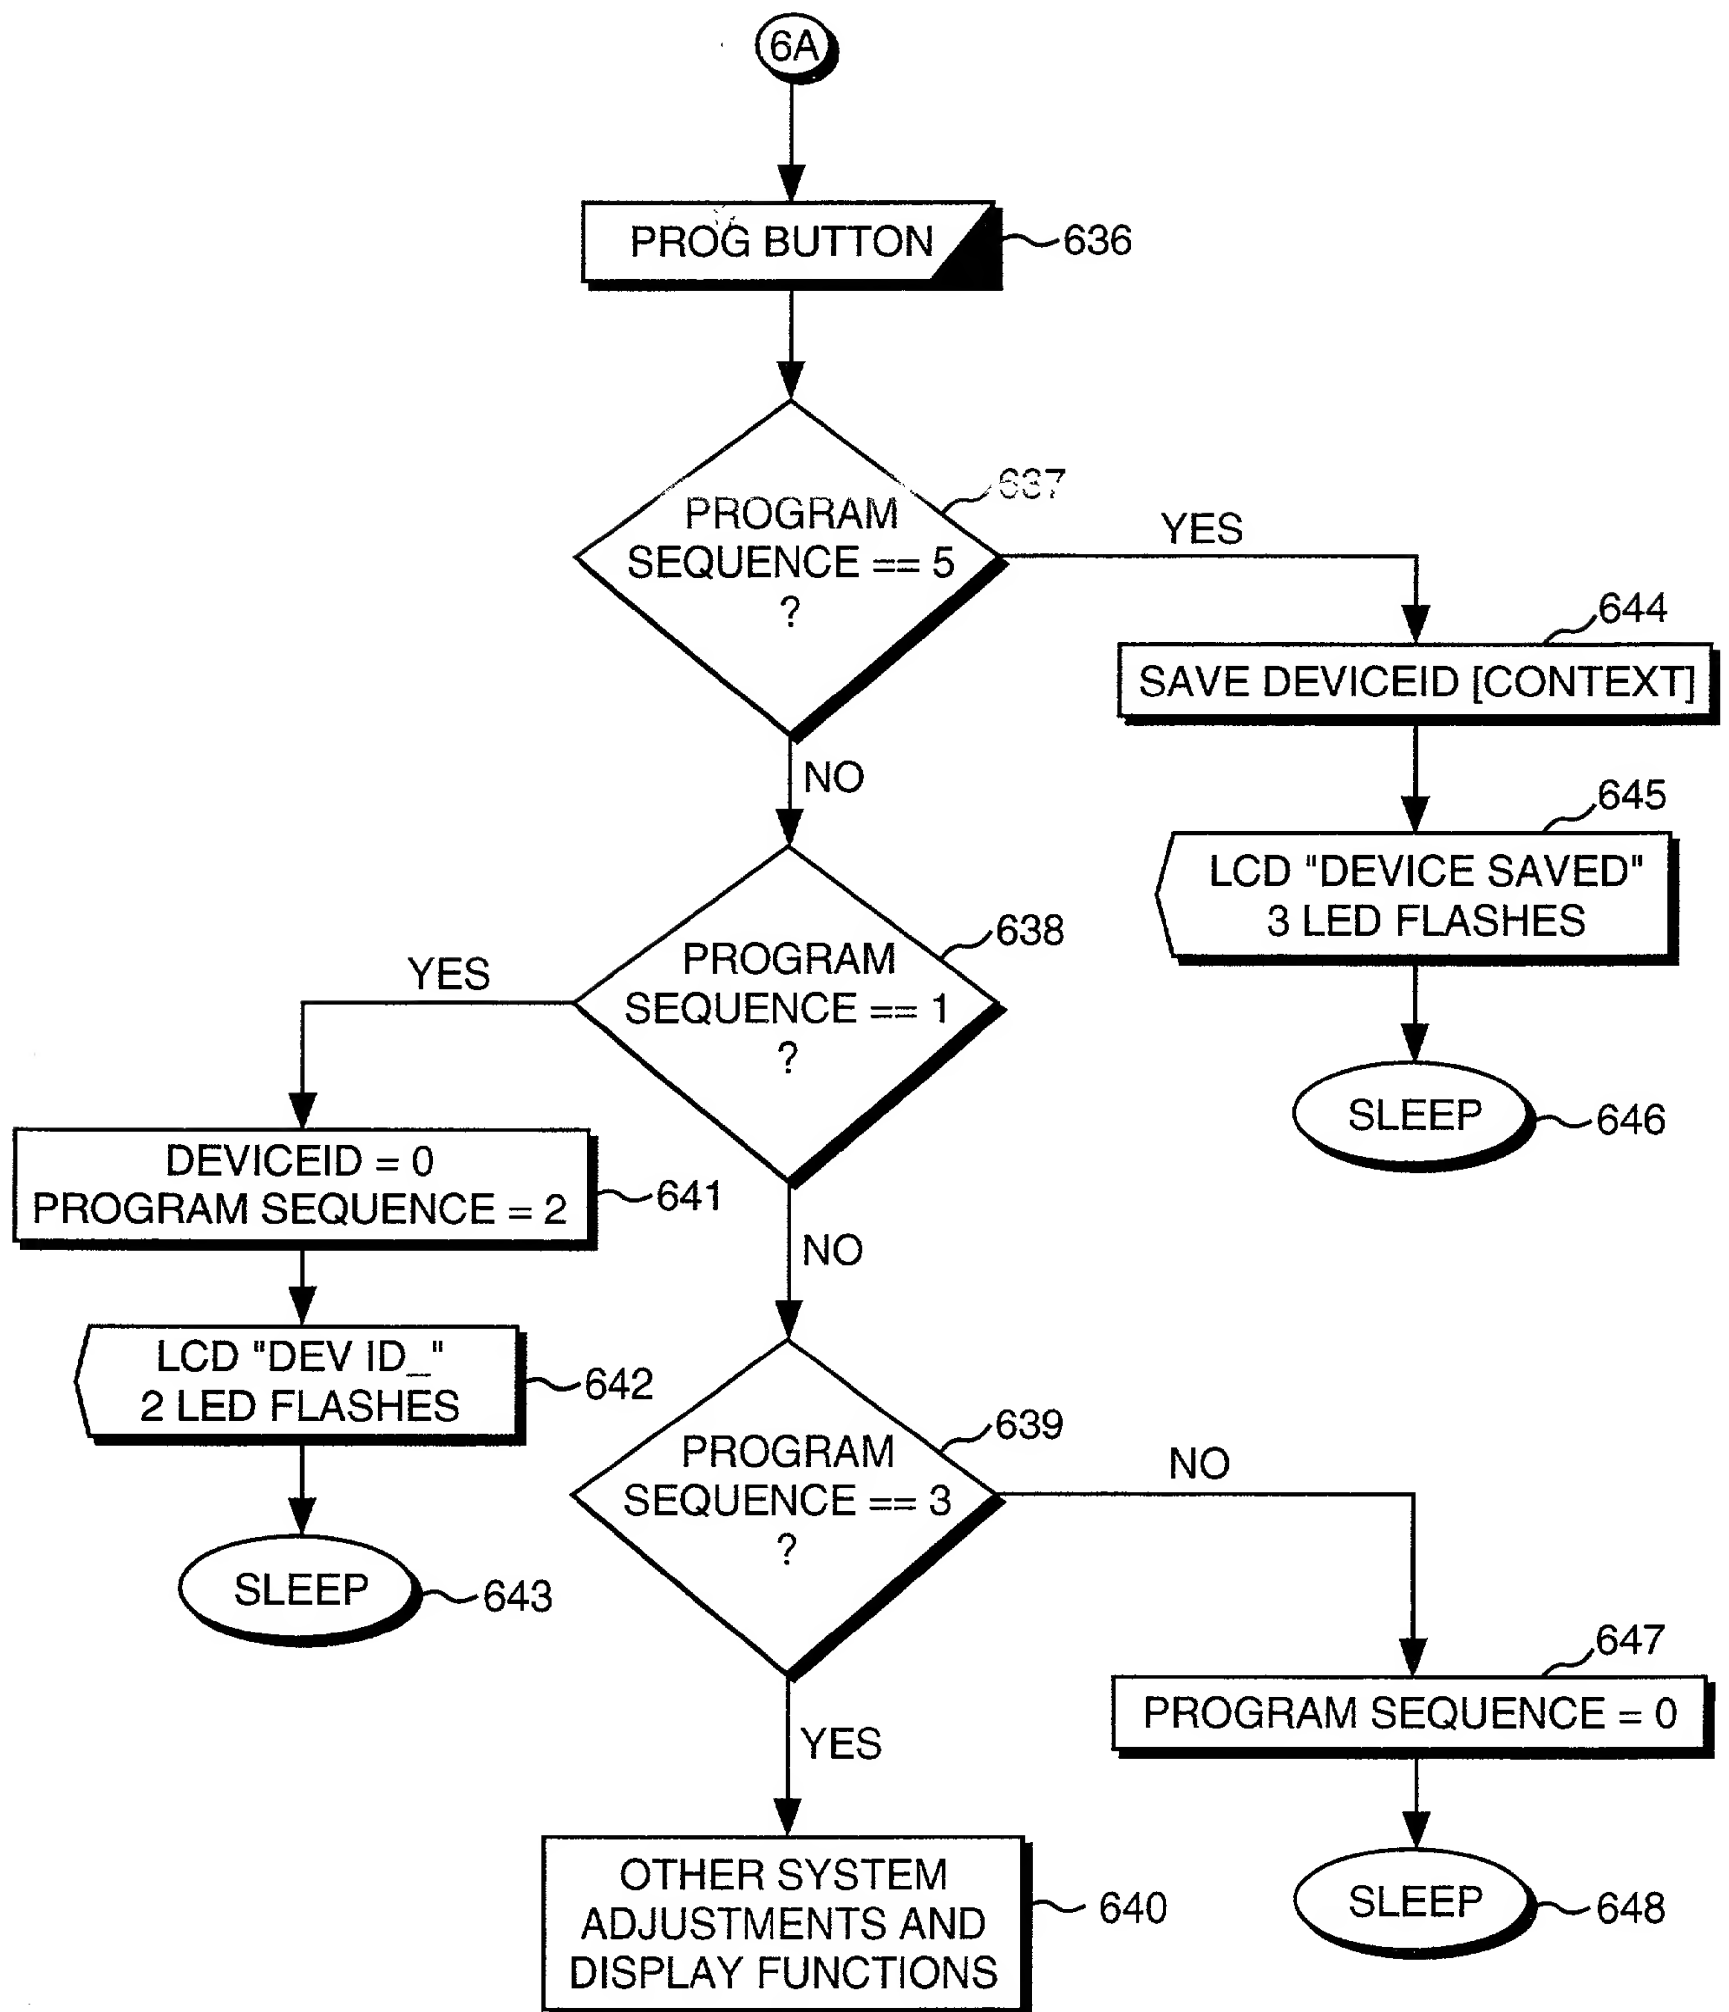

20141313-01140

FIG. 7

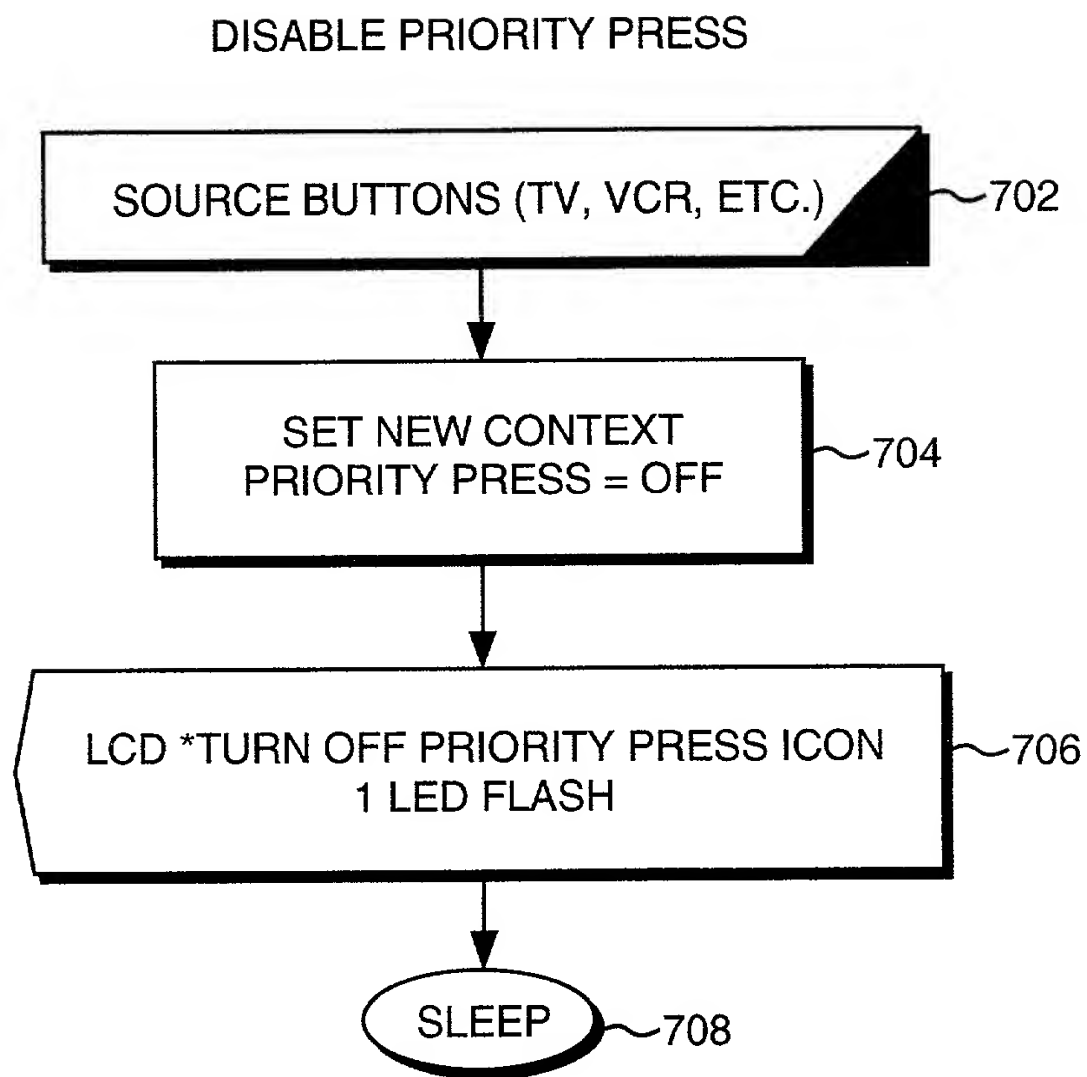


FIG. 8

